
dyson airwrap

User manual



In the box
Getting started
Using your attachments
Pre-styling
Curling
Shaping
Smoothing
Regular filter maintenance

In the box

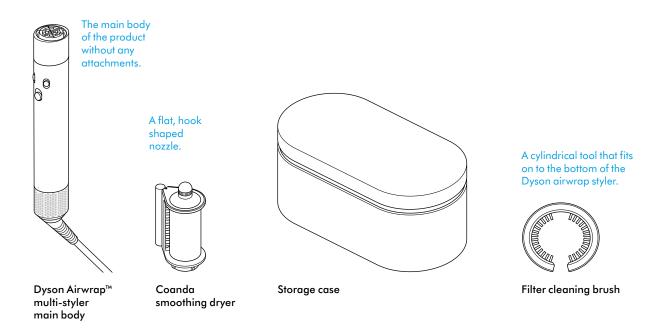


Some attachments may not be included.

brush

You can buy additional attachments at www.dyson.com/mynewairwrap

brush

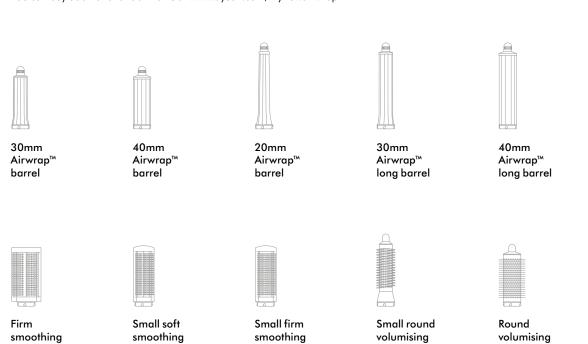

brush


brush

smoothing

brush

brush


Getting started

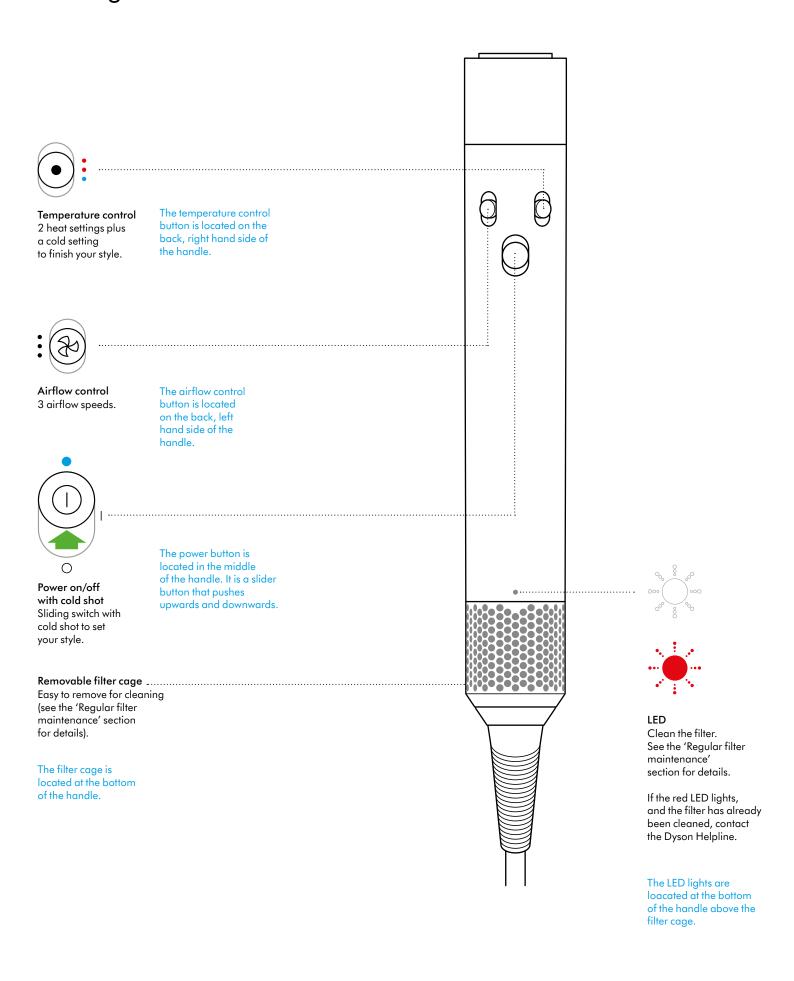

Using your attachments


Connecting the attachment

 
Turn attachment into the main body until it fits securely.



Changing attachments

 To change attachment, pull down on the switch to release.

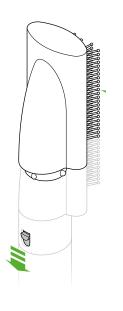




Cool touch tip

During use, the Airwrap™ barrels, Round volumising brush and Coanda smoothing dryer will get hot. To change to another attachment, hold the tip.

Take care when handling hot attachments

Hold the attachment only in the area indicated. Some attachments may need occasional cleaning.

For more information, go to www.dyson.com/mynewairwrap

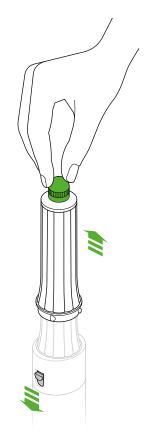



Coanda smoothing dryer



Airwrap™ barrel



Round volumising brush

Pre-styling

Coanda smoothing dryer

Before curling, pre-dry the hair until almost dry.

Comes with two modes (i) drying (ii) smoothing.

Use the cool tip to switch between the two modes.



Curling

 
Barrels

Step 1

Take a section of hair and bring barrel towards tips. Hair will start to wrap around barrel.







To change curl direction, rotate the cool tip.



Shaping

Smoothing brushes

Step

Rough-dry hair with Coanda smoothing dryer.



Step 2

Use Smoothing brush to brush from root to tip.

Tips:

For volume, face bristles outwards. Turn brush inwards at the ends to create shape.





Smoothing

Coanda smoothing dryer

Rotate cool tip to select Smoothing mode.

Press against hair to switch airflow direction.








Use on dry hair to hide flyaways.
Position against hair until it attracts then slowly run down to tips.

For use on dry and straight hair.

How to use the contact bar

Position contact bar against the head until you hear a click and hair attracts. Run from root to tip to hide flyaways.

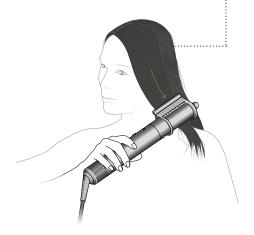

Regular filter maintenance

The filter must be cleaned when the white LED starts flashing.

Ensure that you unplug your appliance from the mains electricity supply and allow to cool down before cleaning your filter.

The Dyson Airwrap™ multi-styler has highly tuned technology to give outstanding performance.

This technology needs to be kept free from dust and hair product residue. Maintenance is required to maintain performance.







Filter cleaning brush



Filter cage

Step 1

Slide the filter cleaning brush over the cable and onto the filter cage.

Using a rotating action, clean the filter cage thoroughly.

Remove the filter cleaning brush.



Slide the filter brush onto the filter cage and rotate to clean the filter cage.


Step 2

Hold the handle of your appliance and pull the filter cage downwards, onto the cable.

Gently pull open the filter cage and slide it off the cable.




Gently pull the filter cage downwards towards the cable.

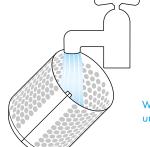

Wash the filter cage under the tap.

Step 3Wash the filter cage under a warm, running tap.


Step 4Shake the filter cage to remove the majority of the excess water, then leave to dry naturally.

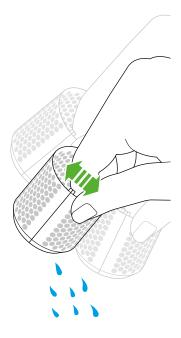

Step 5

Using a rotating and up and down action, clean the filter mesh with the filter cleaning brush until all the debris has been removed.

Do not use water or chemicals to clean the filter mesh.

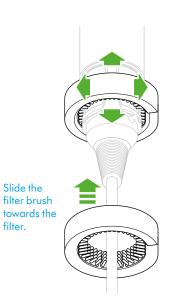

Rotate filter brush around filter mesh to clean.

Step 6 Gently pull the filter cage open and slide it onto the cable.

Slide the filter cage towards the handle and twist until it snaps into place.

